

MB-8000

DVD/CD Player

Betriebsanleitung • Operating Guide • Guía de funcionamiento
Guide d'utilisation • Istruzioni di funzionamento • Gebruiksaanwijzingen



MB-8000 DVD/CD Player

DVD/CD-Spieler MB-8000, *Lecteur de DVD/CD MB8000*, MB-8000 Reproductor de DVD/CD, *Lettore DVD/CD MB-8000*, MB-8000 DVD/CD-speler



Inhalt

	Seite
Einführung	4
Systemfunktionen	
- DVD/CD-Spieler	5
- Fernbedienung	6
Bedienungsanleitung	
- DVD player Setup	8
Nützliche Hinweise	
- Ländercodebeschränkungen	10
- Pflege Ihres Systems	11
- Sicherheits- und Warnhinweise zur Elektrik	11
Montage	
- Rückseite	12
- Montagehinweise Verkabelung	13
- Einbauinformation	14

Nummer für Kundendienst

Anruf zum Nulltarif:

00 8000 VISTEON
00 8000 8478366

Contents

	Page
Introduction	16
System features	
- DVD player	17
- Remote control unit	18
Operating instructions	
- DVD player set-up	20
Helpful hints	
- Region management information	22
- Taking care of your system	23
- Electrical cautions and warnings	23
Installation	
- Back panel	24
- Wiring information	25
- Fitting information	26

Customer Support Line

Call free on:

00 8000 VISTEON
00 8000 8478366

Índice de materias

	Página
Introducción	28
Características del sistema	
- Reproductor de DVD	29
- Mando a distancia	30
Instrucciones de funcionamiento	
- Configuración del reproductor de DVD	32
Consejos prácticos	
- Información de administración regional	34
- Cuidados del sistema	35
- Precauciones y avisos en material de electricidad	35
Instalación	
- Panel trasero	36
- Información sobre la instalación eléctrica	37
- Instrucciones de instalación	38

Línea de consulta del cliente

Llamar gratuitamente al:

00 8000 VISTEON
00 8000 8478366

Introduction

Your MB-8000 is designed to help shorten the longest journeys and will give your rear seat passengers hours of fun and enjoyment.

Get to know your system

Please take a few minutes to look through this Operating Guide so that you become familiar with your MB-8000 and how to operate the controls.

Note:

The system is recommended for use when the ignition is turned on and the engine is running. If it is used at other times, care needs to be taken to avoid draining the battery.

If you require additional information about the system or its features, please contact our Customer Support Line (see page 2).

This product incorporates copyright protection technology that is protected by method claims U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation and is intended for limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Manufactured under License from Dolby Laboratories. "Dolby" and double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. 1992-1997 Dolby Laboratories. All rights reserved.

 
The illustrations, technical information, data and descriptions contained in this publication, were correct at the time of going to print. We reserve the right to make any changes necessary in line with continuous development and improvement.

This publication, together with all information contained in it, and all intellectual property rights on this publication remain the property of Visteon Corporation. The user may not pass on this publication to third parties.

No liability can be accepted for any inaccuracies or omissions in this publication, although due care has been taken to make it as complete and accurate as possible.


© Copyright 2003, Visteon Corporation.

Issued by: European Aftermarket Operations, Visteon Corporation, Sylvan Way, Laindon, Basildon, Essex SS15 6TU.

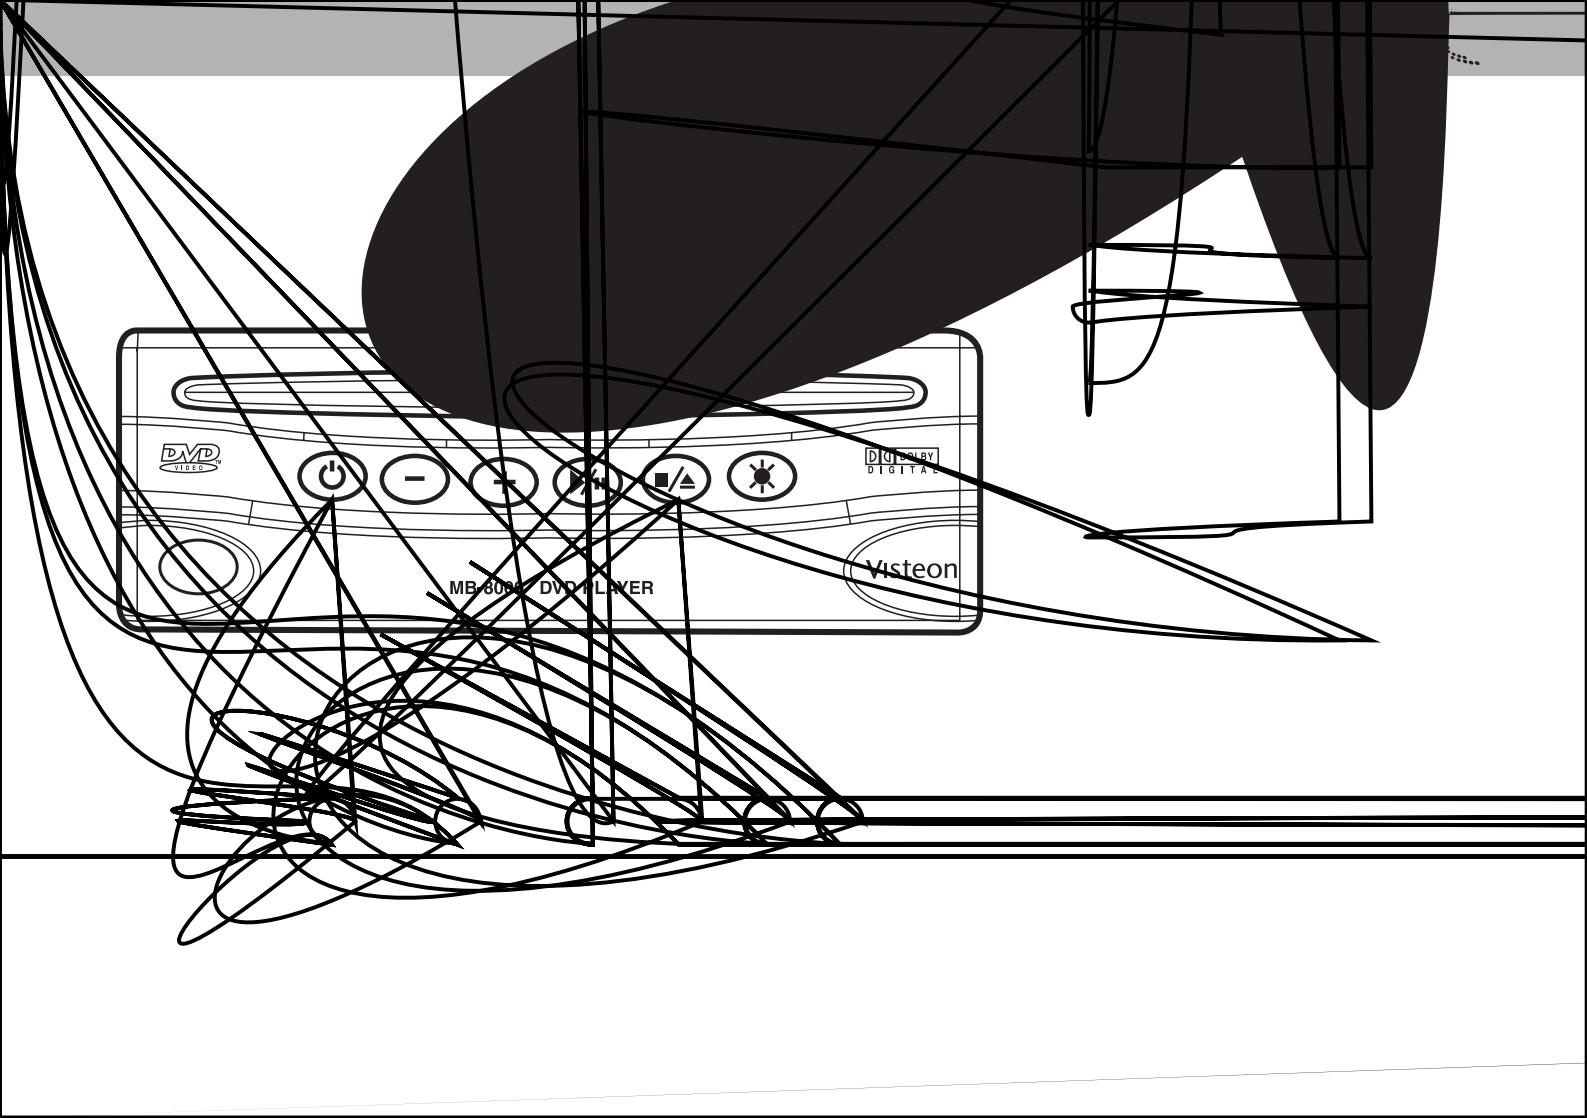

System features

 Remote control unit

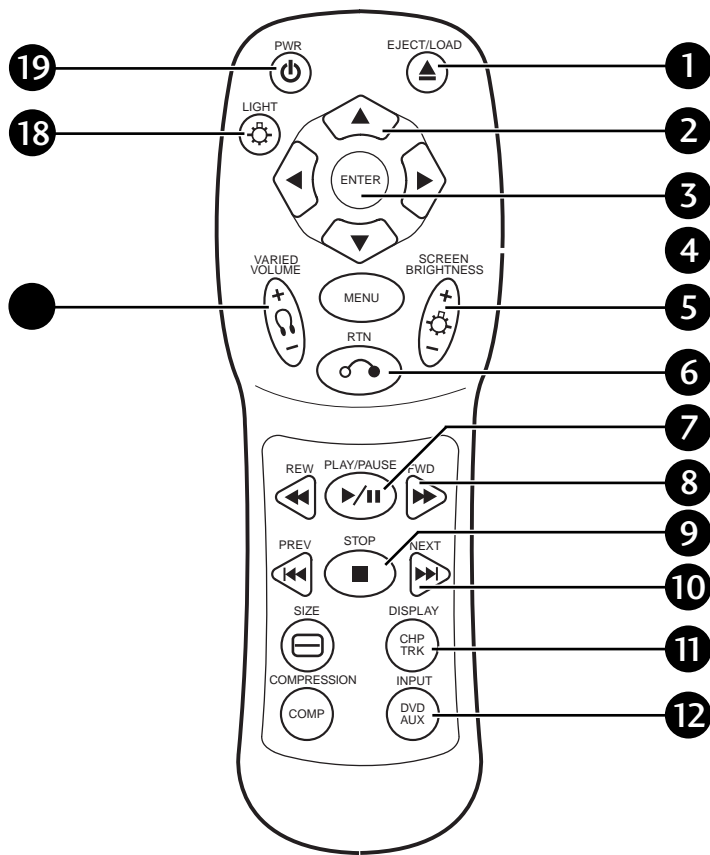

- 1 EJECT/LOAD DISC** - Press to eject a disc. If the disc is not removed, it will be taken back inside the player automatically.
- 2 NAVIGATION BUTTONS** - Press the arrow buttons to navigate through the different disc menu options.
- 3 ENTER BUTTON** - Press to make a selection from an on-screen display disc menu.
- 4 MENU BUTTON** - Press to select the on-screen disc menu.
 - If selected during playback, press again to resume playback from the previous point on the disc.
 - If selected when playback has stopped the DVD Setup menu will be displayed.
- 5 SCREEN BRIGHTNESS** - Feature not available.
- 6 RETURN (RTN) BUTTON** - Press to return to the previous menu screen.

Remote control unit

- 7 PLAY/ PAUSE BUTTON** - Press to start disc playback, press again to pause playback.
- 8 FAST FORWARD (FWD) BUTTON** - Press to fast forward playback (x5).
- 9 STOP BUTTON** - Press to stop playback.
- 10 NEXT CHAPTER/TRACK SELECTOR** - Press to skip forward to a next chapter or track.
- 11 DISPLAY – CHP TRK BUTTON** - Press to display the current playing track and chapter information. Press and hold to display the current playing subtitle menu, press repeatedly to change the subtitle menu option while the subtitle menu is displayed.
- 12 INPUT – DVD/AUX BUTTON** - Press the DVD/AUX button to select input from an auxiliary input source. Press DVD/AUX again to restore disc playback.
Press and hold to display the current playing disc title menu, press repeatedly to change the title option while the title menu is displayed.
- 13 COMPRESSION (COMP) BUTTON** - Press to compress the audio dynamic range. (The difference is between the loudest and the lowest audio sound). The best use would be when using volumes at low levels. e.g. viewing DVD at night (Dolby Digital only).
Press and hold to display the current playing DVD disc audio channel menu, press repeatedly to change the audio channel option while the audio channel menu is displayed.
- 14 SIZE BUTTON** - Press to display the picture angle menu, press repeatedly to change the picture angle option while the picture angle menu is displayed.
- 15 PREVIOUS CHAPTER/TRACK (PREV) BUTTON** - Press to skip backwards to a previous chapter or track.
- 16 FAST REWIND (REW) BUTTON** - Press to fast rewind playback (x5).
- 17 WIRED VOLUME BUTTON** - Press to adjust the volume of the headphones connected to the audio/video loom.
- 18 LIGHT** - Feature not available.
- 19 POWER ON/OFF BUTTON** - Press to turn the system on. Press again to turn the system off.

Operating instructions

DVD Player Setup

DVD player setup menu

The DVD player factory default settings can be changed to suit your personal preferences.

- Press the 'STOP' button to stop DVD playback.
- Press the 'DVD' button to enter the DVD mode.
- Press the 'Disc Menu' button to access the 'DVD Setup Menu'.


Use the 'NAVIGATION' buttons to make a selection and press the 'ENTER' button to confirm it.



Menu language

Set the language used for the menus available on the disc. If the disc does not include the selected language, the disc's default language is set.

Use the 'NAVIGATION' buttons to make a selection and press the 'ENTER' button to confirm it.

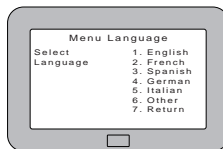

Audio language

Set the language used for the audio available on the disc. If the disc does not include the selected language, the disc's default audio is set.


Use the 'NAVIGATION' buttons to make a selection and press the 'ENTER' button to confirm it.



Subtitle language

Set the language used for the subtitles available on the disc. If the disc does not include the selected language, the disc's default subtitles are set.


Use the 'NAVIGATION' buttons to make a selection and press the 'ENTER' button to confirm it.

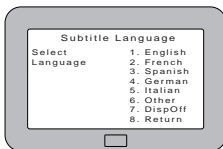

TV aspect


Set the TV Aspect ratio to suit the aspect ratio of the monitor used.

Use the 'NAVIGATION' buttons to make a selection and press the 'ENTER' button to confirm it.

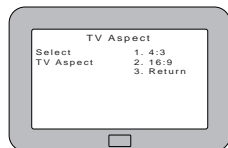

Dynamic range compression


Use the 'NAVIGATION' buttons to make a selection and press the 'ENTER' button to confirm it.

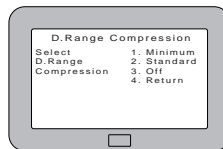

TV mode

Set the TV Mode used to modify the viewing area of the picture shown on the monitor.

Use the 'NAVIGATION' buttons to make a selection and press the 'ENTER' button to confirm it.

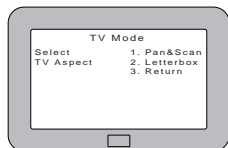

Region management information

The MB-8000 is designed and manufactured to respond to the Region Management Information that is recorded on a DVD disc. If the Region number described on the DVD disc does not correspond to the Region number of this player, this player will not be able to play the DVD disc.

The MB-8000 is set to work only in a particular world region as labelled on the player.

Region Number:	Country under the Region
1	Canada, U.S, U.S Territories.
2	Japan, Europe, South Africa, Middle East (including Egypt).
3	Southeast Asia, East Asia (including Hong Kong).
4	Australia, New Zealand, Pacific Islands, Central America, Mexico, South America, Caribbean.
5	Former Soviet Union, Indian Subcontinent, Africa (also North Korea, Mongolia).
6	China.

Helpful hints

Taking care of your system

Environmental and temperature extremes

Avoid leaving the vehicle:

- In extremely hot or cold temperatures.
- In direct sunlight.
- In high humidity.
- In a dusty environment.
- In locations where strong magnetic fields are generated.
- On a surface that is unstable or subject to vibrations.

Electrical cautions and warnings



CAUTION/WARNING!

Risk of Electrical Shock.

No user-serviceable parts inside.

Refer servicing to qualified service personnel. The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

WARNING:

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.

CAUTION: The MB-8000 should be used with DC12V only. To prevent electrical shocks and fire hazards, DO NOT use any other power source.



Installation cautions

- This unit should be installed by a qualified technician or service personnel.
- This product is designed to operate with a 12V DC negative ground battery system.
- Disconnect the ground wire from the battery terminal before connecting this unit to the electrical system.
- The wiring from some other products or accessories might bear similar colour codes to this product, however they might be for a different function.
- Use proper insulation and fastening materials to prevent electrical short-circuiting.

- Do not connect the yellow wire of this product directly to the battery terminal. Please remember to connect the yellow wire of this product to the ACC of the ignition switch. Failure to do so may result in premature draining of the battery charge.
- Use only supplied accessories to avoid damaging the unit during installation.
- This product should be installed using the built-in mounting holes provided.
- Do not install this product at a position that may cause injuries to the passenger(s) during an accident.

Installation

Back panel

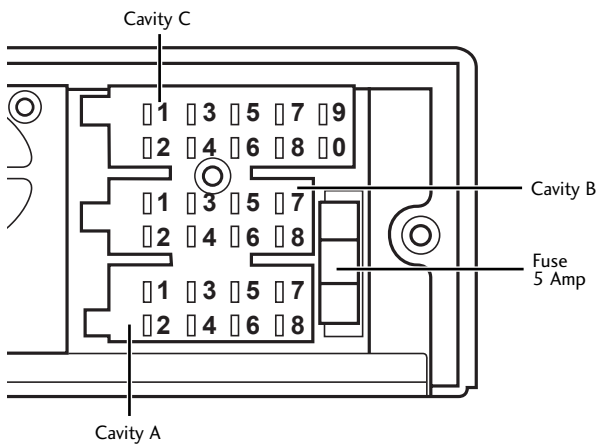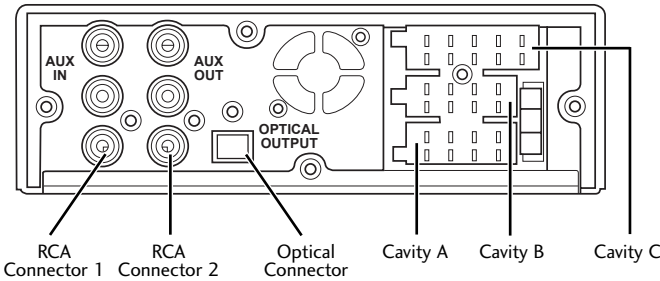


	RCA Connector 1	RCA Connector 2
Colour	Function	
Yellow	video in	video out
White	audio left line in	audio left line out
Red	audio right line in	audio right line out



Optical Connector
Dolby Digital

	Cavity A	Cavity B	Cavity C
Pin	Function		
1	IR in (from screen)	headphones left	Not Used
2	IR ground	headphones ground	Not Used
3	IR out (IR command passes straight through from IR eye on front bezel to this pin. It then goes up to the screen and back down into pin 1)	headphones right	Not Used
4	battery 12V	audio ground	Not Used
5	5V IR out (to drive an external IR eye)	audio left line out	Not Used
6	illumination	audio right line out	Not Used
7	ignition 12V	video out	Not Used
8	ground	video ground	Not Used
9			Not Used
10			Not Used

 Wiring information

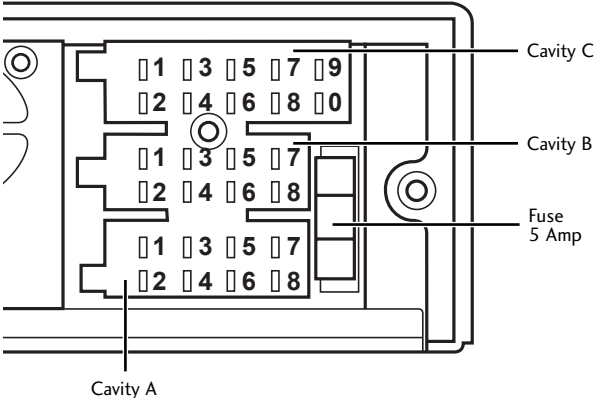

POWER CONNECTION LEADS	
LEAD DESCRIPTION	LEAD COLOUR
Ignition (+12V)	Yellow
Battery (+12V)	Orange
Ground (-)	Black
Illumination (+12V)	Purple

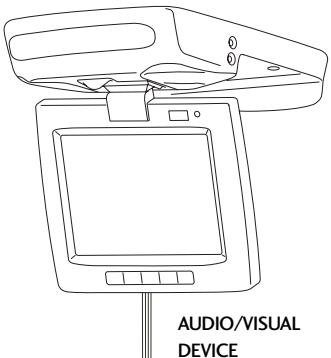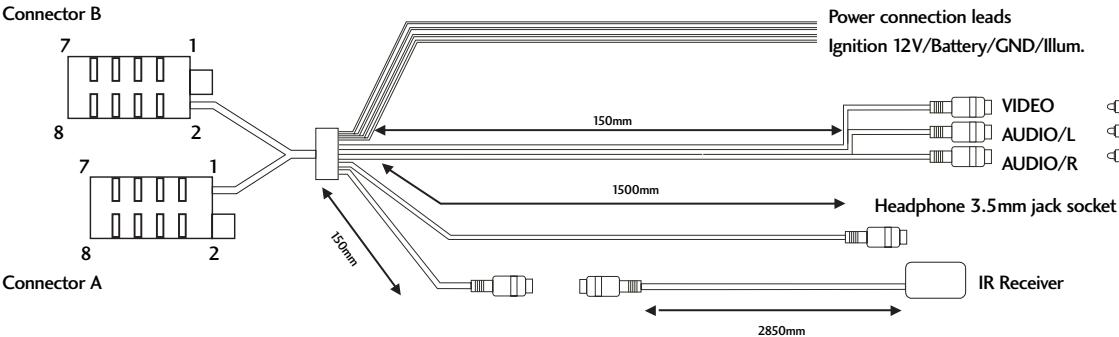  

Installation

Fitting information

Select a suitable mounting place that is dry and waterproof, offers sufficient air circulation and is solid and stable. Fasten the DVD Player with the fixings supplied.

Before installation

1. To prevent a short-circuit:

- Be sure to turn off the ignition and remove the negative (–) battery cable prior to installation.

Note: If the DVD Player is to be installed in a car that is equipped with an on-board drive or navigation computer, do not disconnect the battery cable. If a cable is disconnected, the computer memory may be lost. Under these conditions, use extra caution to avoid causing a short circuit during installation.

2. Do not install the unit in the following locations:

- Locations exposed to direct sunlight.
- Where hot air is discharged from the car heater.
- When proper installation is not possible and where a great deal of vibration is generated.

3. Be sure to use the supplied brackets and screws.

- Be careful not to snag any wires when tightening screws and installing the ground wire.
- When installing the unit, do not use any screws that are part of the brake or steering system.

4. This unit cannot be installed in any way except that which is authorised (horizontal position). Installing it with its side facing down or upside down can cause malfunction.

 
Installation parts

Bracket

Quantity – 4

Screw and Flat washer

Quantity- 4

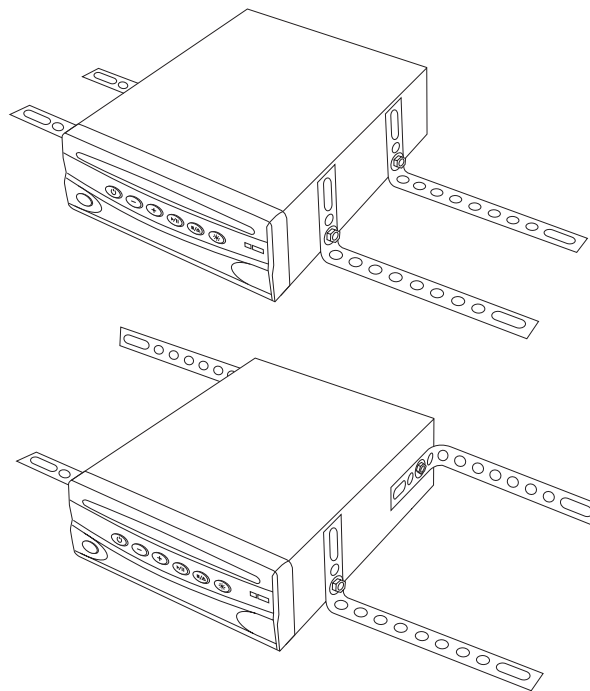





Visteon

Visteon Corporation
European Aftermarket Operations
Rhein-Main-Park
Waldecker Str. 12
D - 64546 Mörfelden-Walldorf
Frankfurt/Main, Germany
Tel: +49 6105 973 333
Fax: +49 6105 973 555

Customer Service Center:
Hotline

gebührenfrei ¥ servicio libre ¥ service gratuit ¥ toll free ¥ servizio libero ¥ kostenlos

B **CH** **D** **DK** **E** **F** **FIN** **GB** **IRL** **L** **N** **NL** **P** **S**

00 800 0 8478366
00 800 0 VISTEON

cservice@visteon.com
www.evisteon.com